aiwa

COMPACT DISC STEREO SYSTEM
COMPACT DISC STEREOSYSTEM
CHAINE STEREO AVEC LECTEUR DE DISQUES COMPACTS
SISTEMA ESTEREO CON REPRODUCTOR DE DISCOS COMPACTOS
SISTEMA STEREO CON LETTORE DI COMPACT DISC

Z-VM270

OPERATING INSTRUCTIONS
BEDIENUNGSANLEITUNG
MODE D'EMPLOI
MANUAL DE INSTRUCCIONES
ISTRUZIONI PER L'USO

En (English)

D (Deutsch)

F (Français)

E (Español)

I (Italiano)

)6-MAR-904-019
)60520AKY-Y

EZ

COMPACT disc DIGITAL AUDIO

ENGLISH

Welcome to the Aiwa Stereo System

Congratulations on your purchase of an Aiwa Stereo System. This system's CD player is the smallest in the world among players allowing the continuous playing of five discs.

Your system is guaranteed to satisfy your needs for all the basic audio functions you had expected from a high quality Aiwa system. What's more, the system is equipped with the DOLBY PRO LOGIC to give you the utmost in full-scale Audio & Visual entertainment. With these, you can now experience the same listening effects found in a movie theater or concert hall.
With your system, sounds will take on a "real-life" presence like you have never experienced before.
Enjoy!

Check your system and accessories

CX-ZVM270 Compact disc stereo cassette receiver

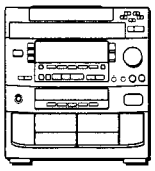

SX-Z270 (L, R) Front speakers

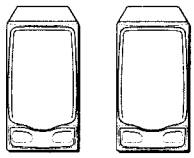

SX-C400 Center speaker

SX-R230 Surround speakers



Remote control



FM antenna

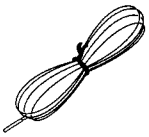

MW/LW antenna

Operating Instructions, etc.

TABLE OF CONTENTS

PREPARATIONS

PRECAUTIONS 2
SETTING UP 3
BEFORE OPERATION 5
SETTING THE CLOCK 6

SOUND

SIMPLE AUDIO ADJUSTMENT 6
DSP SURROUND 7
GRAPHIC EQUALIZER 7

RADIO RECEPTION

MANUAL TUNING 8
PRESETTING STATIONS 8

TAPE PLAYBACK

BASIC OPERATIONS 9
CONTINUOUS PLAY 10

CD PLAYING

BASIC OPERATIONS 11
PROGRAMMED PLAY 12

RECORDING

BASIC RECORDING 13
DUBBING A TAPE MANUALLY 14
DUBBING THE WHOLE TAPE 14
AI EDIT RECORDING 15
PROGRAMMED EDIT RECORDING 16

DOLBY PRO LOGIC

ADJUSTING SPEAKER LEVEL BALANCE 17
PLAY WITH DOLBY PRO LOGIC 18

KARAOKE

MICROPHONE MIXING 18
KARAOKE PROGRAM 20

TIMER

SETTING THE TIMER 21
SETTING THE SLEEP TIMER 22

OTHER CONNECTIONS

CONNECTING OPTIONAL EQUIPMENT 22
LISTENING TO EXTERNAL SOURCES 23

GENERAL

CARE AND MAINTENANCE 23
SPECIFICATIONS 24
TROUBLESHOOTING GUIDE 25

PARTS INDEX 25

PRECAUTIONS

Read the Operating Instructions carefully and completely before operating the unit. Be sure to keep the Operating Instructions for future reference. All warnings and cautions in the Operating Instructions and on the unit should be strictly followed, as well as the safety suggestions below.

Installation

1 **Water and moisture** — Do not use this unit near water, such as near a bath, sink, swimming pool, or the like.
2 **Heat** — Do not use this unit near sources of heat, including heating vents, stoves, or other appliances that generate heat. It also should not be placed in temperatures less than 5°C (41°F) or greater than 35°C (95°F).
3 **Mounting surface** — Place the unit on a flat, even surface.
4 **Ventilation** — The unit should be situated with adequate space arround it so that proper heat ventilation is assured. Allow 10 cm clearance from the rear and the top of the unit, and 5 cm from each side.
   - Do not place the unit on a bed, rug, or similar surface that may block the ventilation openings.
   - Do not install the unit in a bookcase, cabinet, or airtight rack where ventilation may be impeded.
5 **Objects and liquid entry** — Take care that objects or liquids do not get inside the unit through the ventilation openings.
6 **Carts and stands** — When placed or mounted on a stand or cart, the unit should be moved with care.
   Quick stops, excessive force, and uneven surfaces may cause the unit or cart to overturn or fall.
7 **Condensation** — Moisture may form on the CD pickup lens when:
   - The unit is moved from a cold spot to a warm spot
   - The heating system has just been turned on
   - The unit is used in a very humid room
   - The unit is cooled by an air conditioner
   When this unit has condensation inside, it may not function normally. Should this occur, leave the unit for a few hours, then try to operate again.
8 **Wall or ceiling mounting** — The unit should not be mounted on a wall or ceiling, unless specified in the Operating Instructions.

Electric Power

1 **Power sources** — Connect this unit only to power sources specified in the Operating Instructions, and as marked on the unit.
2 **AC power cord**
   - When disconnecting the AC power cord, pull it out by the AC power plug. Do not pull the cord itself.
   - Never handle the AC power plug with wet hands, as this could result in fire or shock.
   - Power cords should be firmly secured to avoid being severely bent, pinched, or walked upon. Pay particular attention to the cord from the unit to the power socket.
   - Avoid overloading AC power plugs and extension cords beyond their capacity, as this could result in fire or shock.
3 **When not in use** — Unplug the AC power cord from the AC power plug if the unit will not be used for several months or more. When the cord is plugged in, a small amount of current continues to flow to the unit, even when the power is turned off.

Maintenance

Clean the unit only as recommended in the Operating Instructions.

Damage Requiring Service

Have the units serviced by a qualified service technician if:
- The AC power cord or plug has been damaged
- Foreign objects or liquid have got inside the unit
- The unit has been exposed to rain or water
- The unit does not seem to operate normally
- The unit exhibits a marked change in performance
- The unit has been dropped, or the cabinet has been damaged

DO NOT ATTEMPT TO SERVICE THE UNIT YOURSELF.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This compact disc player is classified as a CLASS 1 LASER product.
The CLASS 1 LASER PRODUCT label is located on the exterior.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT

CAUTION!

Invisible laser radiation when open and inter locks defeated. Avoid exposure to beam.

ADVARSEL!

Usynlig laserståling ved åbning, når sikkerhedsafbrydereer ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteiylle.

VARNING!

Om apparaten används på annat sätt än i denna bruksanvisning specificerats, kan användaren utsätta för osynlig laser-strålning, som överskrider gränsen för laserklass 1.

SETTING UP

The DOLBY PRO LOGIC system which is the biggest feature of this stereo system provides you with audio visual entertainment in your home.
Complete setting and connection of the main unit, supplied speakers, your TV and video equipment according to the following procedure.

POSITIONING THE SPEAKERS

To achieve the optimum effects obtainable with the DOLBY PRO LOGIC system, it is important to position the speakers properly. Refer to the following illustration to find out the best location in your room.

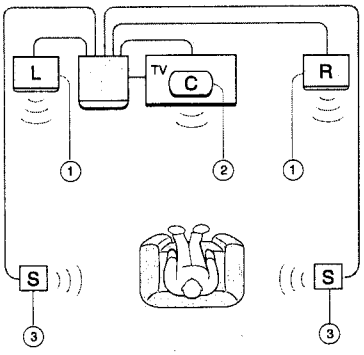

① Front speakers
② Center speaker
Position in the center of the two front speakers. In addition, position on or below the TV set, if connecting a TV set to the unit.
③Surround speakers
Place the surround speakers directly to the side of or slightly behind the listening area. Align them horizontally, about 1 meter above ear height.

NOTE

- No sound is heard from the surround speakers when the DOLBY PRO LOGIC and DSP are set to off.
- No sound is heard from the center speaker when the DOLBY PRO LOGIC is set to off.

CONNECTIONS

Before connecting the AC cord
The rated voltage of your unit shown on the rear panel is AC 230 V only. Check that the rated voltage matches your local voltage.

IMPORTANT
Connect the speakers, antennas, and all optional equipment first. Then connect the AC cord at the end.

The speaker system
The speaker marked R is the right speaker, and the marked L is the left speaker.

1 Connect the supplied antennas.

Connect the FM antenna to the FM 75 Ω terminal and the MW/LW antenna to the MW/LW LOOP terminal.

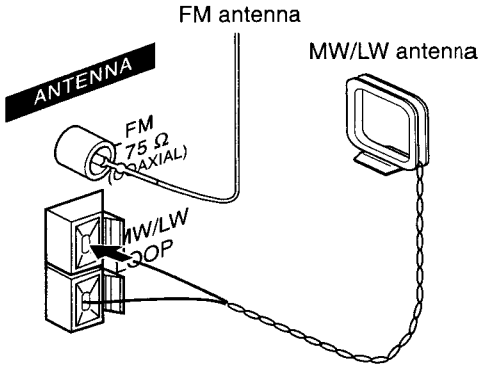

2 Connect the front speakers.

Connect the speaker with R mark to SPEAKERS R terminals, and the speaker with L mark to SPEAKERS L terminals.

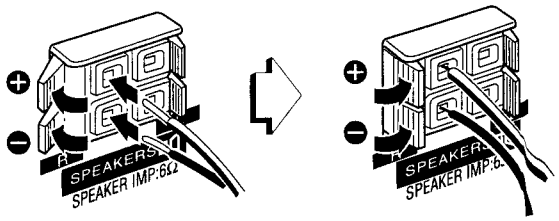

The speaker cord with the white stripe should be connected to the ⊕ terminal and the black cord to the ⊖ terminal.

3 Connect the surround speakers.

Connect the surround speaker cords to the SURROUND SPEAKERS terminals.
There is no difference between the surround speakers. Both speakers can be connected as R (right) or L (left).

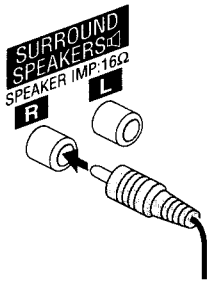

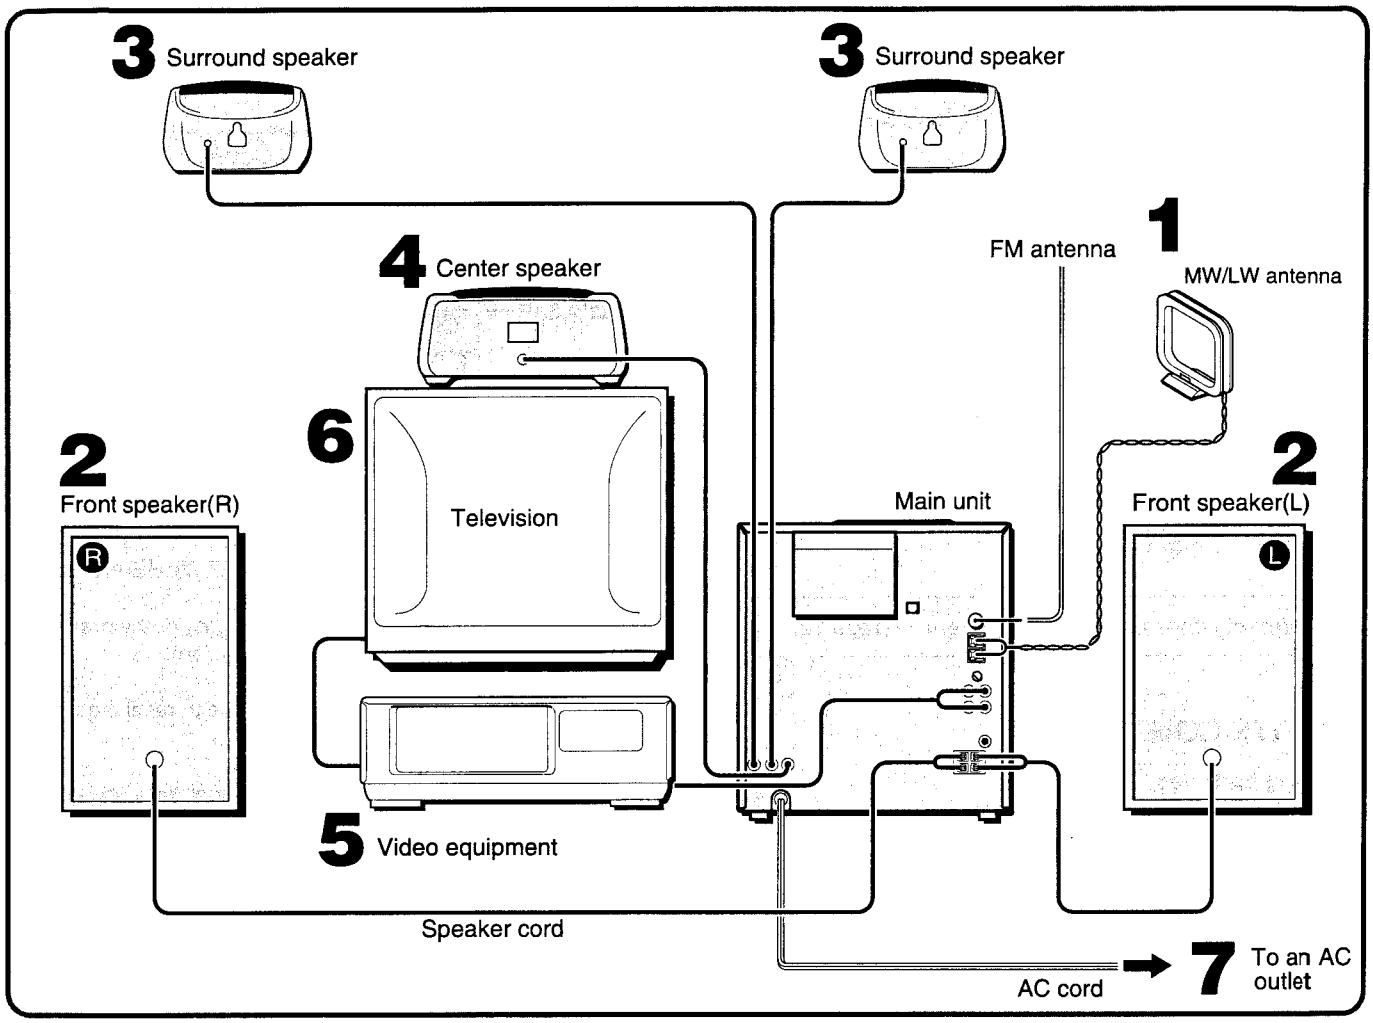

4 Connect the center speaker.

Connect the center speaker cord to the CENTER SPEAKER terminal.

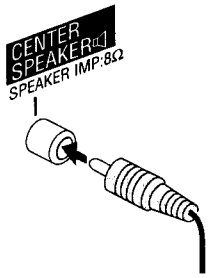

5 Connect the video equipment.

Connect the VIDEO/AUX IN jacks of this unit to the audio output jack of the video equipment with an optional audio connecting cord.

6 Connect the Television to the video equipment.

Refer to the Operating Instructions of the connected equipment for details.

7 Connect the AC cord to an AC outlet.

To stand the MW/LW antenna on a surface

Fix the claw to the slot.

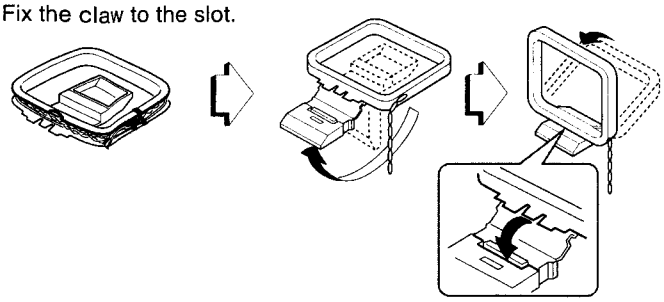

To position the antennas

FM feeder antenna:

Extend fully and position for the best possible reception. The use of an outdoor antenna is recommended for better reception.

MW/LW loop antenna:

Position to find the best direction.

NOTE

- Be sure to connect the speaker cords correctly. Improper connections can cause short circuits in the SPEAKERS terminals.
- Do not leave objects generating magnetism near the speakers.
- Do not bring the FM antenna near metal objects or curtain rails.
- Do not bring the MW/LW antenna near other optional equipment, the stereo system itself, the AC cord or speaker cords, as noise will be picked up.
- Do not unwind the MW/LW antenna wire.

To mount the surround speakers on the wall

Carefully mount the surround speakers so that the speakers are firmly secured.

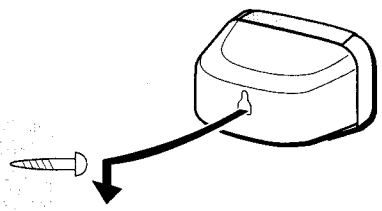

CONNECTING AN OUTDOOR ANTENNA

For better FM reception, use of an outdoor antenna is recommended.
Connect the outdoor antenna to the FM 75 Ω terminals.

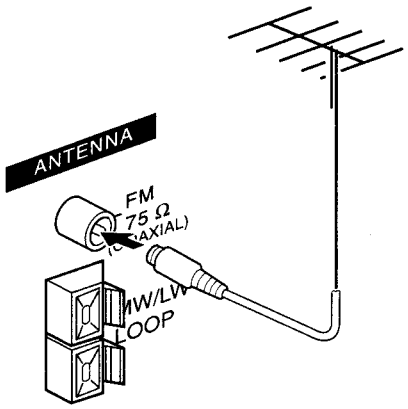

To connect other optional equipment → page 22.

REMOTE CONTROL

Inserting batteries

Detach the battery cover on the rear of the remote control and insert two R6 (size AA) batteries.

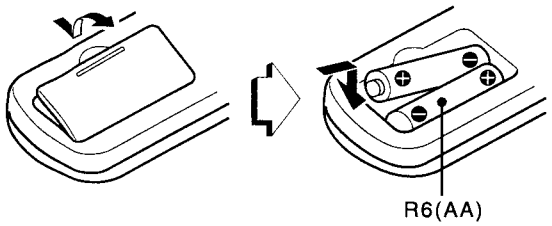

When to replace the batteries

The maximum operational distance between the remote control and the sensor on the main unit should be approximately 5 meters (16 feet). When this distance decreases, replace the batteries with new ones.

NOTE

- If the unit is not going to be used for an extended period of time, remove the batteries to prevent possible electrolyte leakage.
- The remote control may not operate correctly when:
  - The line of sight between the remote control and the remote sensor inside the display window is exposed to intense light, such as direct sunlight
  - Other remote controls are used nearby (those of a television, etc.)

BEFORE OPERATION

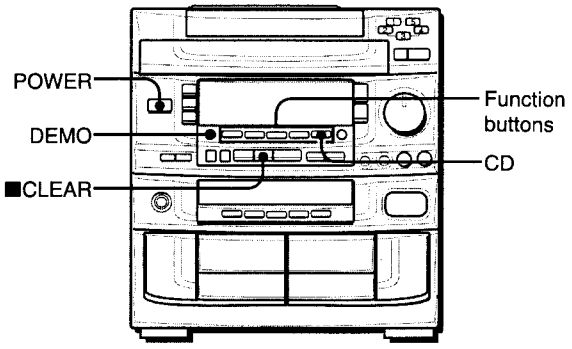

To turn the unit on

Press one of the function buttons (TAPE, TUNER, PHONO, VIDEO/AUX, CD).
Playback of the inserted disc or tape begins, or the previously tuned station is received (Direct Play Function).
The POWER button is also available.
The disc compartment may open and close to reset the unit.

DEMO (Demonstration) mode

When the AC cord is connected for the first time, the display window demonstrates the functions of the unit. When the power is turned on, the DEMO display is overridden by the operation display. When the power is turned off, the DEMO mode is restored.

To cancel DEMO mode
Press the DEMO button. To re-activate, press again.

Illumination guides

Whenever the AC cord is connected or one of the function buttons is pressed, the buttons for that operation light up or flash.
Example: When the AC cord is connected, the ▮▮SET button flashes as a guide to setting the current time.

Flash windows

The windows on the top of the unit and the cassette decks light up or flash while the unit is being powered on.
To turn off the light of the top window, press the ■CLEAR button while pressing the CD button. To turn back on, repeat the above.
To turn off the light of the cassette decks, press the ■CLEAR button while pressing the TAPE button. To turn back on, repeat the above.

After use

Press the POWER button to turn off the power. The display changes to the clock.

Using the remote control

The instructions in this manual refer mainly to the buttons on the main unit. Buttons on the remote control with the same names as those on the main unit can be used as well.

SETTING THE CLOCK

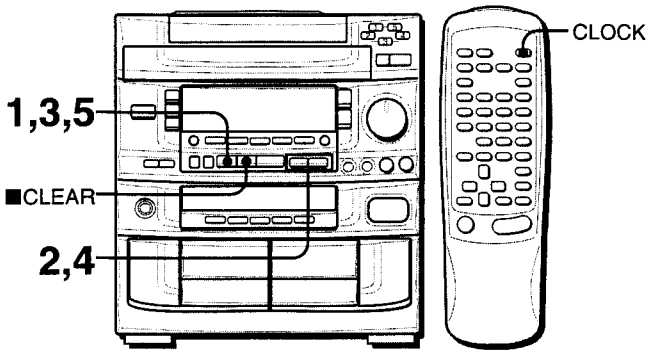

When the AC cord is connected for the first time, the ❚❚SET button flashes.
Set the time as follows while the power is off.

1 Press the ❚❚SET button.
The hour flashes.

2 Press the ⏮ DOWN or ⏭ UP button to designate the hour.

3 Press the ❚❚SET button to set the hour.
The hour stops flashing and the minute starts flashing.

4 Press the ⏮ DOWN or ⏭ UP button to designate the minute.

5 Press the ❚❚SET button to set the minute and complete setting.
The minute stops flashing on the display and the clock starts from 00 second.

To correct the current time
Press the POWER button to turn the unit off. Press the ❚❚SET button and carry out steps 1 to 5 above.

To display the current time
Press the CLOCK button on the remote control. The clock is displayed for 4 seconds.
However, the time cannot be displayed during recording.

To switch to the 24-hour standard
Press the CLOCK button on the remote control and then press the ■CLEAR button within 4 seconds.
Repeat the same procedure to restore the 12-hour standard.

If the clock display flashes while the power is off
This is caused by a power interruption. The current time needs to be reset.
If power is interrupted for more than approximately 24 hours, all settings stored in memory after purchase need to be reset.

SIMPLE AUDIO ADJUSTMENT

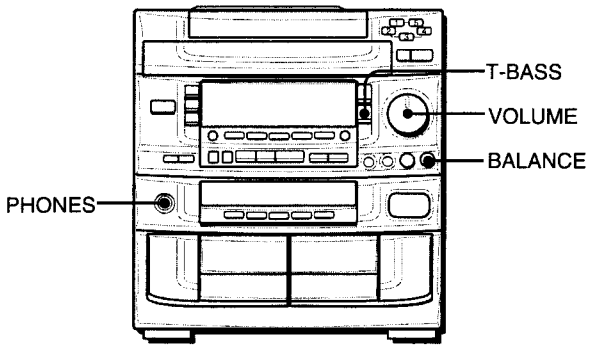

VOLUME CONTROL

Turn the VOLUME control on the main unit, or press the VOLUME buttons on the remote control.

To change the left/right balance
Turn the BALANCE control.

SUPER T-BASS SYSTEM

The T-BASS system enhances the realism of low-frequency sound.
Press the T-BASS button.
Each time it is pressed, the level changes. Select one of the three levels, or the off position to suit your preference.

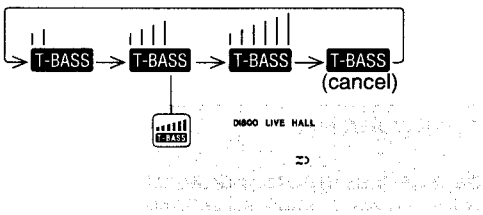

NOTE
Low-frequency sound may be distorted when the T-BASS system is used for a disc or tape in which low-frequency sound is originally emphasized. In this case, cancel the T-BASS system.

Using the headphones
- Connect headphones to the PHONES jack with a stereo standard plug (ø6.3 mm).
  No sound is output from the speakers while the headphones are plugged in.
- When the headphones are plugged in, the SURROUND system and the DOLBY PRO LOGIC are canceled.

DSP SURROUND

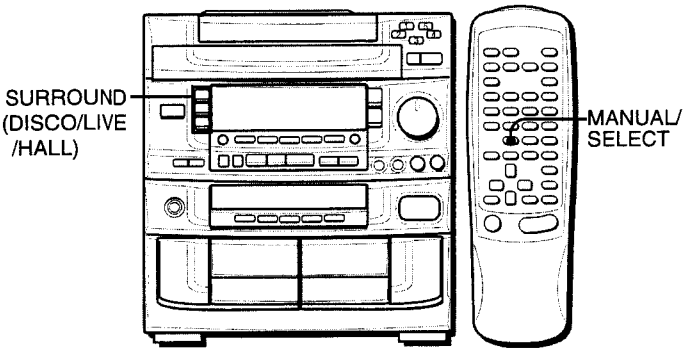

The DSP (Digital Signal Processor) surround circuits can recreate the effect of sounds reflected from walls or ceilings, to obtain the sound presence of real environments.
There are three modes with matching graphic equalization curves.

DISCO: Little reverberation and medium range surround to resemble a disco.
LIVE: Long reverberation and wide range surround to resemble a live stage.
HALL: Long reverberation and medium range surround to resound like a hall.

Press one of the SURROUND buttons.



Equalization curves are selected automatically to match the SURROUND modes and can also be selected manually or turned off to suit your preference.

When the music source is monaural
Select LIVE to obtain a simulated stereo effect. When DISCO or HALL is selected, no sound will be heard from the surround speakers.

To cancel the selected mode
Press the selected SURROUND button again. S-oFF is displayed. While the SURROUND mode is off, no sound is heard from the surround speakers.

To adjust the volume of the surround speakers
Press the MANUAL SELECT button once on the remote control. "S" is displayed for 2 seconds. Press the ⏮ DOWN or UP ⏭ button on the remote control within these 2 seconds.
- The DOLBY PRO LOGIC surround speakers level is also changed. (See page 17.)

NOTE
- When a microphone is used, the SURROUND mode is automatically canceled.
- When the DOLBY PRO LOGIC is turned on, the SURROUND mode is automatically canceled.

GRAPHIC EQUALIZER

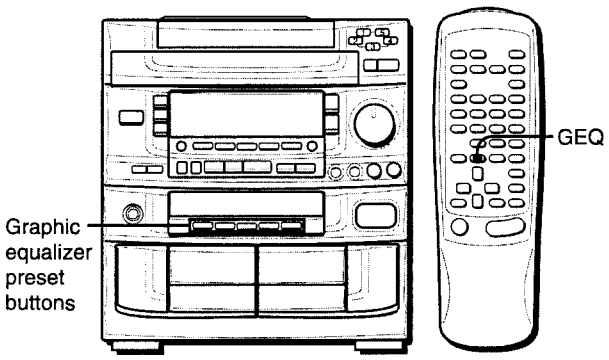

SELECTING THE DESIRED EQUALIZATION CURVE

This unit provides the following five different equalization curves.
ROCK: Powerful sound emphasizing treble and bass
POP: More presence in the vocals and midrange
JAZZ: Accented lower frequencies for jazz-type music
CLASSIC: Enriched sound with heavy bass and fine treble
BGM (Background Music): Calm tone with suppressed bass and treble

Press one of the graphic equalizer preset buttons.
The selected program mode indicator flashes and that program mode appears on the display.

To cancel the graphic equalizer mode
Press the selected button again. EQoFF is displayed and the equalization curve becomes flat.

To select with the remote control
Press the GEQ button repeatedly until the desired program mode is displayed.

→ ROCK → POP → JAZZ → CLASSIC → BGM → EQoFF (cancel)

MANUAL TUNING

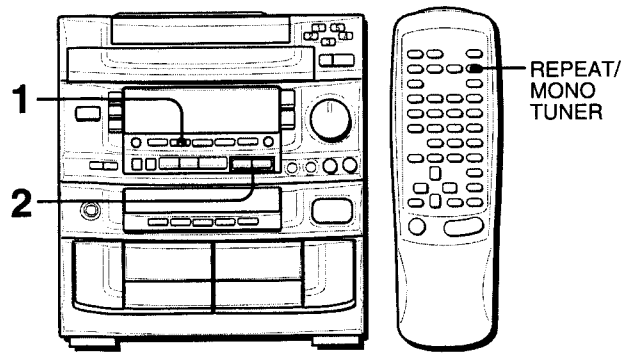

1 Press the TUNER/BAND button to select the FM, MW or LW band.
If the power is turned off, the previously tuned station will be played (Direct Play Function).

2 Press the ⏮ DOWN or ⏭ UP button to tune in to a station.
Each time the button is pressed, the frequency changes.
When a station is received, "TUNE" is displayed for 2 seconds.
During FM stereo reception, ((◎)) is displayed.

To search for a station quickly (Auto Search)
Keep the ⏮ DOWN or ⏭ UP button pressed until the tuner starts searching for a station. After tuning in to a station, the search stops.
To stop the Auto Search manually, press the ⏮ DOWN or ⏭ UP button.
- The Auto Search may not stop at the stations with very weak signals.

When an FM stereo broadcast contains noise
Press the REPEAT/MONO TUNER button on the remote control so that "MONO" appears on the display.
Noise is reduced, although reception is monaural.

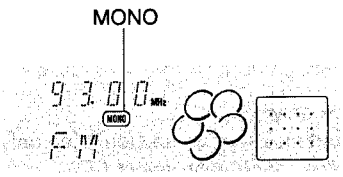

To restore stereo reception, press the button so that MONO disappears.

To change the MW tuning interval
The default setting of the MW tuning interval is 9 kHz/step. If you use this unit in an area where the frequency allocation system is 10 kHz/step, change the tuning interval.
Press the POWER button while pressing the TUNER/BAND button.
To reset the interval, repeat this procedure.

PRESETTING STATIONS

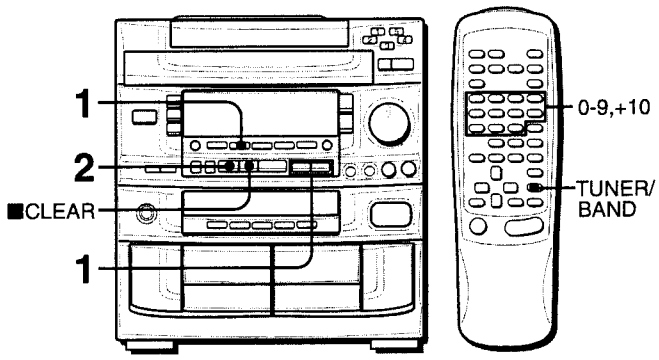

The unit can store a total of 32 preset stations. When a station is stored, a preset number is assigned to the station. Use the preset number to tune in to a preset station directly.

1 Press the TUNER/BAND button to select a band, and press the ⏮ DOWN or ⏭ UP button to tune in to a station.

2 Press the ▮▮ SET button to store the station.
A station is assigned to a preset number, beginning from 1 in consecutive order for each band.

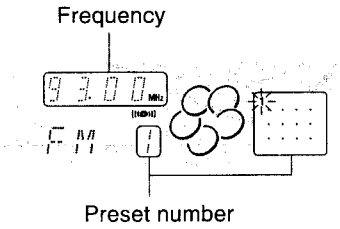

3 Repeat steps 1 and 2.
No more stations will be stored if a total of 32 preset stations have already been stored for both the bands.

NOTE

When the MW tuning interval is changed, all preset stations are cleared. The preset stations have to be set again.

PRESET NUMBER TUNING

Use the remote control to select the preset number directly.

1 **Press the TUNER/BAND button to select a band.**

2 **Press the numeric buttons to select a preset number.**
Example:
To select preset number 25, press the +10, +10 and 5 buttons.
To select preset number 10, press the +10 and 0 buttons.

Selecting a preset number on the main unit
Press the TUNER/BAND button to select a band. Then, press the ◄► DIRECTION/PRESET button repeatedly.
Each time the button is pressed, the next higher number is selected.

To clear a preset station
Select the preset number of the station to be cleared with the numeric buttons. Then, press the ■CLEAR button, and press the ❚❚SET button within 4 seconds.
The preset numbers of all other stations in the band with higher numbers are also decreased by one.

About cassette tapes
- **To prevent accidental erasure,** break off the plastic tabs on the cassette tape after recording with a screwdriver or other pointed tool.

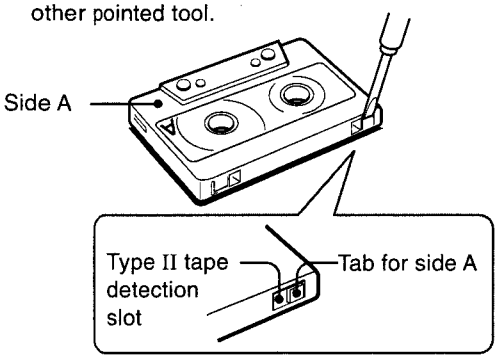

To record on the tape again, cover the tab openings with adhesive tape, etc. (On Type II tapes, take care not to cover the Type II tape detection slot.)
- **120-minute or longer tapes** are extremely thin and easily deformed or damaged. They are not recommended.
- **Take up any slack in** the tape with a pencil or similar tool before use. Slack tape may break or jam in the mechanism.

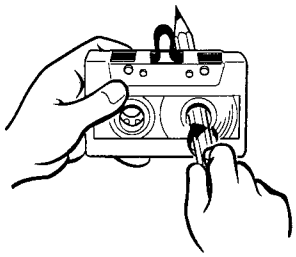

DOLBY NR system
The Dolby Noise Reduction system reduces tape hiss noise. For optimum performance when playing back a tape recorded with the DOLBY NR system, turn on the DOLBY NR system.

BASIC OPERATIONS

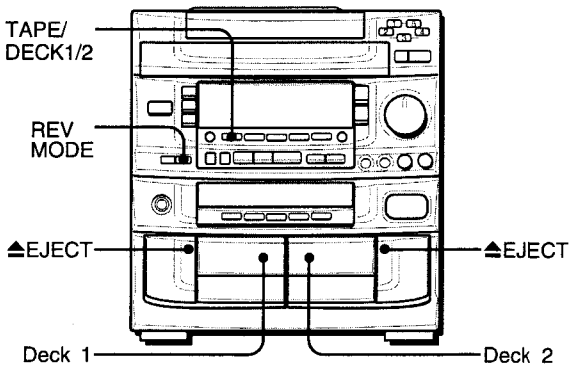

INSERTING TAPES

Use Type I (normal), Type II (high/CrO_2) or Type IV (metal) tapes for playback.

Press the TAPE button and press the ≜EJECT mark to open the cassette holder.

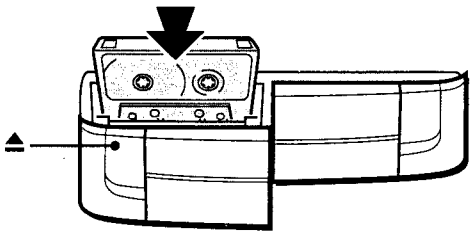

Insert a tape with the exposed side down. Push the cassette holder to close.

To select a reverse mode of Deck 2
Each time the REV MODE button is pressed, the reverse mode changes.

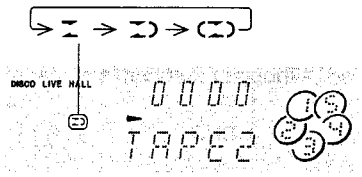

To play one side only, select ⇉.
To play from front side to reverse side once only, select ⇉).
To play both sides repeatedly, select (⇄).
- When tapes are loaded in both decks, ⇄) on the display indicates Continuous Play.
- On deck 1, tapes are always played back on both sides once.

PLAYING BACK A TAPE

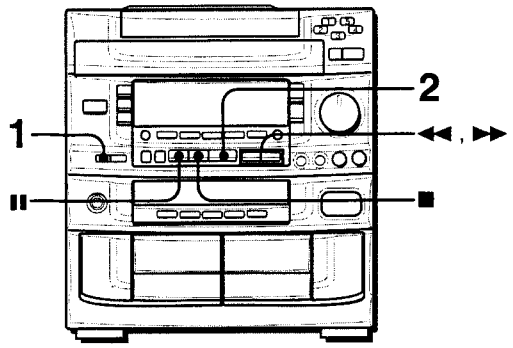

Insert a tape.

1 Press the DOLBY NR button and turn Dolby NR on or off to match the playback tape.

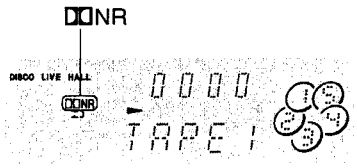

For tapes recorded with DOLBY NR, turn on DOLBY NR.
For tapes recorded without DOLBY NR, turn off DOLBY NR.

2 Press the ◀▶ button to start play.

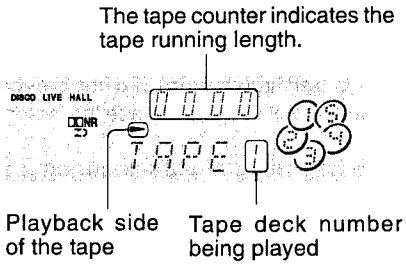

▶: The front side is being played (forward).
◀: The back side is being played (reverse).

When tapes are loaded in both decks
Press the TAPE button first to select a deck.
The selected deck number is displayed.

To stop play, press the ■ button.
To pause play (Deck 2 only), press the II button. To resume play, press again.
To change the playback side, press the ◀▶ DIRECTION/ PRESET button in play or pause mode.
To fast forward or rewind, press the ◀◀ or ▶▶ button in stop mode. Then press the ■ button to stop the tape.

To start play when the power is off (Direct Play Function)
Press the TAPE button. The power is turned on and play of the inserted tape begins.

To set the tape counter to 0000
Press the ■CLEAR button in stop mode.
The counter is also set to 0000 when the cassette holder is opened.

MUSIC SENSOR

If there is a 4-second or longer blank between each track, a search for the beginning of the current or next track during playback can be done easily.
When the ▶ indicator of the ◀▶ button is flashing, press the ▶▶ button to move to the next track or the ◀◀ button to move to the beginning of the current track.
When the ◀ indicator of the ◀▶ button is flashing, press the ◀◀ button to move to the next track, or the ▶▶ button to move to the beginning of the current track.

The search function may not be able to detect tracks under the following conditions:
- Blanks of less than 4 seconds between tracks
- Noisy blanks
- Long passages of low-end sound
- Low overall recording levels

CONTINUOUS PLAY

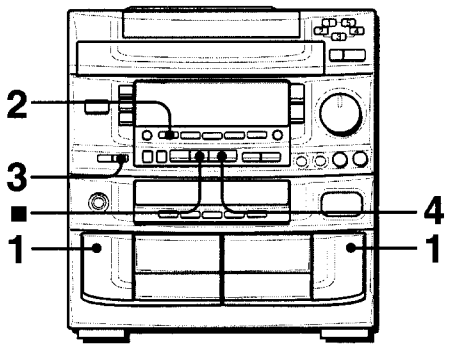

After playback on one deck finishes, the tape in the other deck will start to play without interruption.

1 Insert tapes into Deck 1 and Deck 2.

2 Press the TAPE/DECK 1/2 button to select the deck to be played back first.

3 Press the REV MODE button to select ⇄.

4 Press the ◀▶ button to start playback.
Playback continues until the ■ button is pressed.

BASIC OPERATIONS

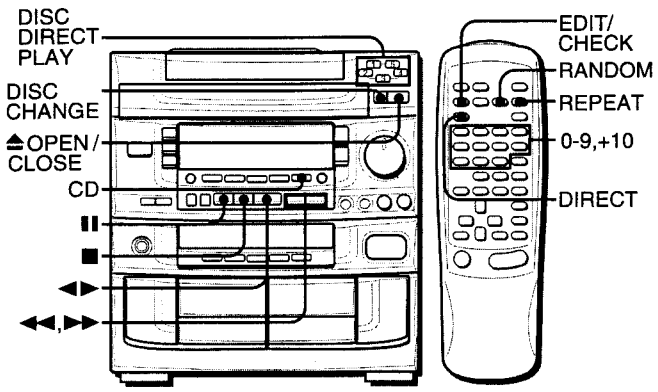

LOADING DISCS

Press the CD button, then press the ≜OPEN/ CLOSE button to open the disc compartment. Load disc(s) with the label side up.

To load one or two discs, place the disc(s) on the tray(s) in the direction of the arrows as illustrated.

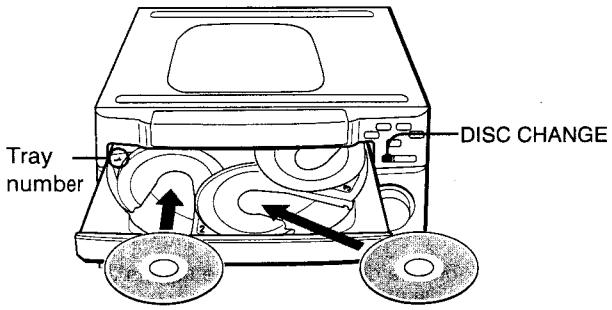

To load three to five discs, press the DISC CHANGE button to rotate the trays after placing two discs. Place the next disc on empty tray. Each time the DISC CHANGE button is pressed, the trays rotate and one disc can be placed.

After placing the discs, press the ≜OPEN/CLOSE button to close the disc compartment.
The display shows the information of the disc to be played.

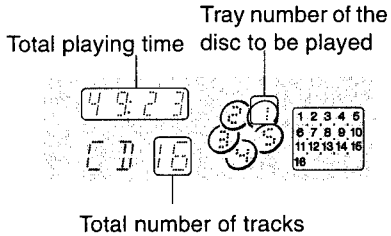

PLAYING DISCS

Load discs.

To play all discs in the disc compartment, press the ◀▶ button.
All discs are played once.

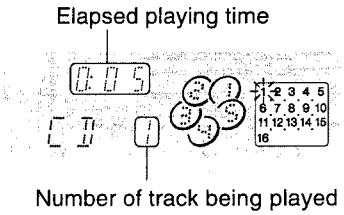

To play one disc only, press one of the DISC DIRECT PLAY buttons.
The disc with the selected tray number is played once.

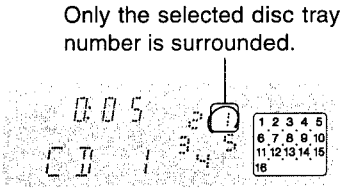

To play with the remote control
Press the DIRECT button, then press one of the numeric buttons 1 to 5 within 3 seconds to select a disc.

To stop play, press the ■ button.
To pause play, press the II button. To resume play, press again.
To search for a particular point during playback, keep the ◀◀ or ▶▶ button pressed and release the button at the desired point.
To skip to the beginning of a track during playback, press the ◀◀ or ▶▶ button repeatedly.
To remove discs, press the ≜OPEN/CLOSE button.
You can only remove the two discs that face you. When the disc(s) to be removed does not face you, press the DISC CHANGE button repeatedly.

To start play when the power is off (Direct Play Function)
Press the CD button. The power turns on and play of the loaded disc begins.
To replace discs before play, press the ≜OPEN/CLOSE button to open the disc compartment.

To check the remaining time
Press the EDIT/CHECK button on the remote control during play. The amount of time remaining until all tracks finish playing is displayed. To restore the playing time display, press the EDIT/ CHECK button.

Selecting a track with the remote control
1 Press the DIRECT button, then press one of the numeric buttons 1 to 5 within 3 seconds to select a disc.
2 Press the numeric buttons and the +10 button to select a track.
Example:
To select the 25th track, press the +10, +10 and 5 buttons.
To select the 10th track, press the +10 and 0 buttons.
The selected track starts to play and play continues to the end of that disc.

Replacing discs during play

While one disc is playing, the other discs can be replaced without interrupting play.

1 Press the DISC CHANGE button.
Two discs can be replaced.
2 Remove the discs and replace with other discs.
To replace the other two discs, press the DISC CHANGE button again.
3 Press the ⏏OPEN/CLOSE button to close the disc compartment.

NOTE

- When loading an 8-cm (3-inch) disc, make sure to place it onto the inner circle of the tray precisely. Otherwise, the disc may be damaged or the disc compartment will not open. If it does not open, please consult your Aiwa dealer for repair.
- Do not place more than one compact disc on one disc tray.
- Do not tilt the unit with discs loaded. Doing so may cause malfunctions.
- When transporting the unit, remove the discs from the trays.
- When replacing the discs during play, do not replace discs other than those facing you.
If you place a disc on the empty right inner tray, and then press the ⏏OPEN/CLOSE button, "ERROR" is displayed and the disc compartment may not close. Remove the disc on that tray.

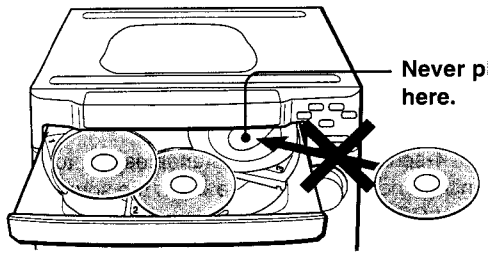

RANDOM PLAY

All the tracks on the selected disc or on all the discs can be played randomly.

Press the RANDOM button on the remote control.

RANDOM lights up on the display.
To cancel random play, press again.

NOTE

- Even if the ◀◀ button is pressed during random play, a previously played track cannot be skipped. The unit returns to the beginning of the current track only.
- Direct selection of the tracks with the numeric buttons is not possible.

REPEAT PLAY

A single disc or all the discs can be played repeatedly.

Press the REPEAT button on the remote control.

↻ lights up on the display.
To cancel repeat play, press again.

PROGRAMMED PLAY

Up to 30 tracks can be programmed from any of the inserted discs.

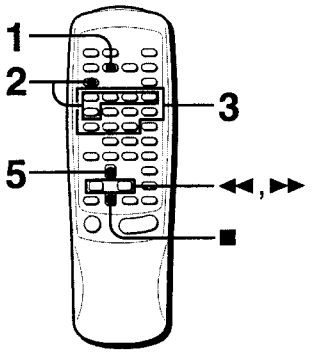

Use the remote control.

***1* Press the PRGM button twice in stop mode.**

The PRGM indicator flashes on the display.



- When the PRGM button is pressed once in step 1, the unit enters the KARAOKE PROGRAM (page 20).

***2* Press the DIRECT button, then press one of the numeric buttons 1 to 5 within 3 seconds to select a disc.**

The selected disc is indicated in red on the display.
Go to the next step when the tray stops rotating.

***3* Press the numeric buttons and the +10 button to program a track.**

Example:

To select the 25th track, press the +10, +10 and 5 buttons.
To select the 10th track, press the +10 and 0 buttons.

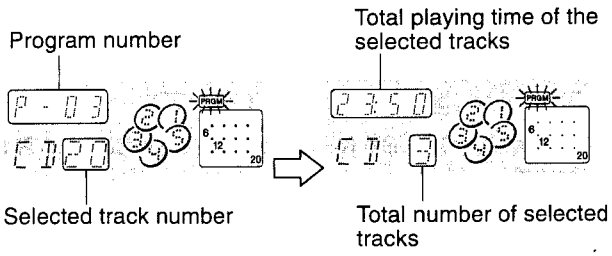

***4* Repeat steps 2 and 3 to program other tracks.**

***5* Press the ◀▶ button to start play.**

To check the program

Each time the ◀◀ or ▶▶ button is pressed in stop mode, a disc number, track number, and program number will be displayed.

To clear the program

Press the ■CLEAR button in stop mode.

To add tracks to the program

Before playing, repeat steps 2 and 3. The track will be programmed after the last programmed track.

To change the programmed tracks

Clear the program and repeat all the steps again.

NOTE

During programmed play, the EDIT/CHECK, DISC CHANGE, RANDOM, DIRECT and numeric buttons do not function.

BASIC RECORDING

This section explains how to record from the tuner, CD player, or external equipment.

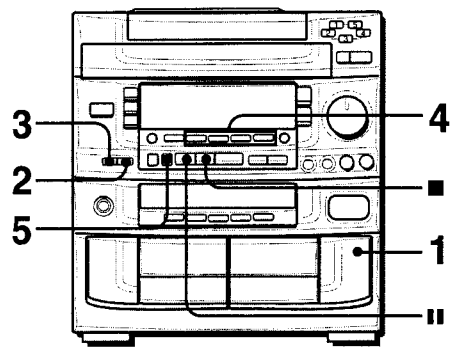

Preparation
- Set the tape to the point where recording will start.
- Use Type I (normal) and Type II (high/CrO_2) tapes for recording.

1 Insert the tape to be recorded on into Deck 2.
Insert the tape with the side to be recorded on first facing out from the unit.

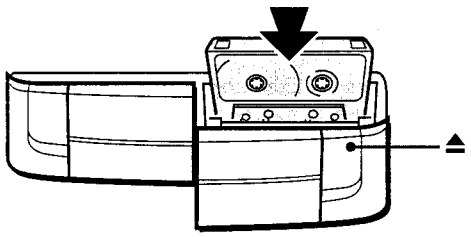

2 Press the REV MODE button to select the reverse mode.
To record on one side only, select ⇄.
To record on both sides, select ⇄ or (⇄).

3 Press the DOLBY NR button to turn Dolby NR on or off.
To record with DOLBY NR, turn on DOLBY NR.
To record without DOLBY NR, turn off DOLBY NR.

4 Press one of the function buttons and prepare the source to be recorded.
To record from a CD, press the CD button and load the disc(s).
To record from a radio broadcast, press the TUNER button and tune in to a station.
To record from the connected source, press the PHONO or VIDEO/AUX button and play.

5 Press the ● REC/REC MUTE button to start recording.

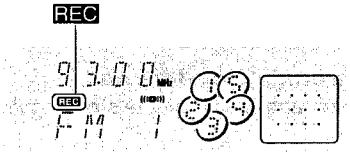

When the selected function is CD, playback and recording start simultaneously.

To stop recording, press the ■ button.
To pause recording, press the II button. (Applicable when the recording source is TUNER, PHONO or VIDEO/AUX.) To resume recording, press again.

To start recording with the remote control
First press the ● REC/REC MUTE button, and then press the ◄► button within 2 seconds.

NOTE
If squealing or beating sounds occur when recording an MW or LW broadcast, press the MONO TUNER button on the remote control, so as to eliminate the noise.
By pressing the buttons repeatedly, the dot light is turned on and off in the display window.



SOUND ADJUSTMENT DURING RECORDING

The output volume and tone of the speakers or headphones may be freely varied without affecting the level of the recording.

INSERTING BLANK SPACES

Insertion of 4-second blank spaces enables you to activate the Music Sensor function. (Applicable when the source is TUNER, PHONO or VIDEO/AUX.)

1 **Press the ● REC/REC MUTE button during recording or while in recording pause mode.**
REC on the display flashes for 4 seconds and the tape runs without recording. After 4 seconds, the deck enters the recording pause mode.
2 **Press the II button to resume recording.**

To insert a blank space of less than 4 seconds, press the ● REC/REC MUTE button again while REC is flashing.
To insert blank spaces of more than 4 seconds, after the deck enters recording pause mode, press the ● REC/REC MUTE button again. Each time the button is pressed, a 4-second blank space is added.

To erase a recording
Make sure the microphone is not connected to this unit.
1 Insert the tape to be erased into Deck 2 and press the TAPE/DECK 1/2 button to display "TAPE 2".
2 Set the tape to the point where the erasure is to be started.
3 Set the reverse mode by pressing the REV MODE button.
4 Press the ● REC/REC MUTE button to start the erasure.

DUBBING A TAPE MANUALLY

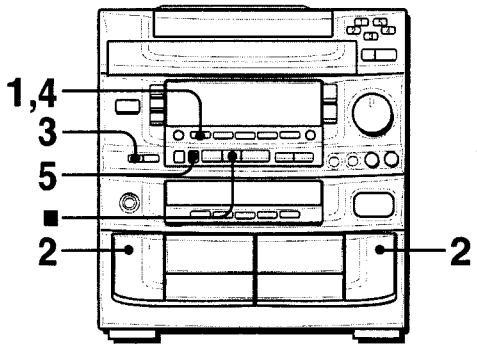

Preparation
- Set the tape to the point where recording will start.
- The reverse mode is automatically set to ⇄. Note that recording will be done on one side of the tape only.

1 **Press the TAPE button.**

2 **Insert the original tape into Deck 1 and the tape to be recorded on into Deck 2.**
Insert the tapes with the sides to be played back or recorded on first facing out from the unit.

3 **Press the DOLBY NR button to turn off the Dolby NR.**
DOLBY NR on the display goes out.

4 **Press the TAPE/DECK 1/2 button to select Deck 1.**
TAPE 1 is displayed.

5 **Press the ● REC/REC MUTE button to start recording.**
Playing and recording start simultaneously.

To stop dubbing
Press the ■ button.

To set the Dolby NR when playing back the dubbed tape
Press the DOLBY NR button and turn Dolby NR on or off to match the original tape.

DUBBING THE WHOLE TAPE

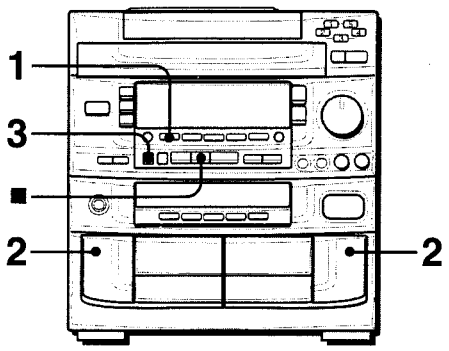

This function allows you to make exact copies of both sides of the original tape. The reverse side of both tapes will start simultaneously as soon as the longer tape has been reversed.

NOTE
- Dubbing does not start from a point halfway in the tape.
- The reverse mode is automatically set to ⇄. Recording will be done on both sides.
- The Dolby NR does not affect recording.

1 **Press the TAPE button.**

2 **Insert the original tape into Deck 1 and the tape to be recorded on into Deck 2.**
Insert each tape with the side to be played back or recorded on first facing out from the unit.

3 **Press the SYNC DUB button once or twice to start recording.**
① **For recording at normal speed,** press it once to display "N-DUB".
② **For recording at high speed,** press it twice to display "H-DUB".

① ②



The tapes are rewound to the beginning of the front sides, and recording starts.

To stop dubbing
Press the ■ button.

To set the Dolby NR when playing back the dubbed tape
Press the DOLBY NR button and turn Dolby NR on or off to match the original tape.

NOTE
- Recording does not start, if the erasure prevention tab on either side of the tape is broken off.
- If the leader segment of the tape to be recorded on is longer than that of the original tape, recording on the reverse side may stop midway through the recording. In this case, dub each side manually following the procedure in "DUBBING A TAPE MANUALLY".

AI EDIT RECORDING

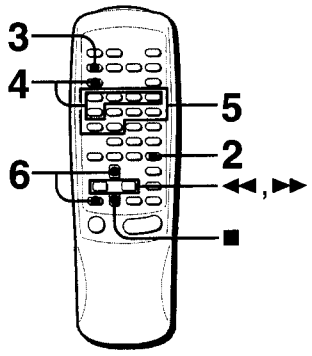

The AI edit function enables CD recording without worrying about tape length and track length. When a CD is inserted, the unit automatically calculates the total track lengths. If necessary, the order of tracks are rearranged so that no track is cut short. (AI: Artificial Intelligence)

NOTE

AI edit recording will not start from a point halfway into the tape. The tape must be recorded from the beginning of either side.

Use the remote control from steps 3 to 6.

***1* Insert the tape into Deck 2, and press the DOLBY NR button to turn Dolby NR on or off.**

Insert the tape with the side to be recorded on first facing out from the unit.

***2* Press the CD button and load the disc(s).**

***3* Press the EDIT/CHECK button once.**

"EDIT" lights up and "AI" flashes on the display.

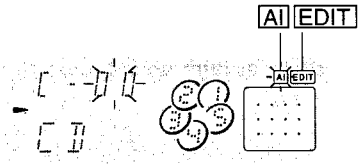

Each time it is pressed, the display changes as follows.

AI EDIT ⟶ PRGM EDIT

***4* Press the DIRECT button, then press one of the numeric buttons 1 to 5 within 3 seconds to select a disc.**

***5* Press the numeric buttons to designate the tape length.**

10 to 99 minutes can be specified.

Example: When using a 60-minute tape, press the 6 and 0 buttons.

In a few seconds, the microcomputer determines the tracks to be recorded on each side of the tape.

- The ◀◀ and ▶▶ buttons are also available to designate the tape length.

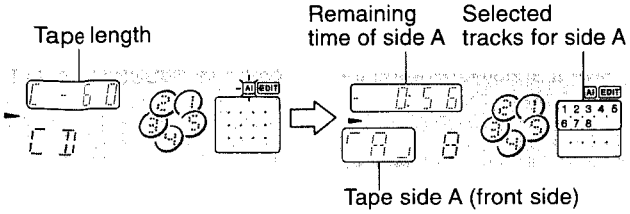

***6* First press the ●REC/REC MUTE button, then press the ◀▶ button within 2 seconds to start recording.**

The tape is rewound to the beginning of the front side, the lead segment is played through for 10 seconds, and recording starts. When recording on the front (side A) ends, recording on the back (side B) starts.

To stop recording

Press the ■ button. Recording and CD play stop simultaneously.

To clear the edit program

Press the ■ button twice so that "EDIT" disappears on the display.

To check the order of the programmed track numbers

Before recording, press the EDIT/CHECK button to select side A or B to be checked, and press the ◀◀ or ▶▶ button repeatedly.

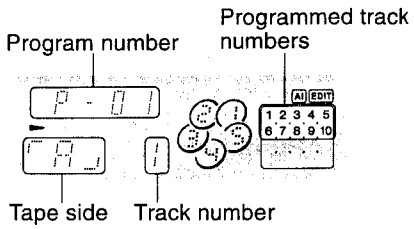

To add tracks from other discs to the edit program

If there is any time remaining on the tape after step 5, you can add tracks from other discs in the CD compartment .

1 Press the EDIT/CHECK button to select side A or B.
2 Press the DIRECT button, then press one of the numeric buttons 1 to 5 within 3 seconds to select a disc.
3 Press the numeric buttons to select tracks.
AI goes out and PRGM starts flashing on the display.
A track which has a playing time longer than the remaining time cannot be programmed.
4 Repeat steps 2 and 3 to add more tracks.
5 Start recording.

Time on cassette tapes and editing time

The actual cassette recording time is usually a little longer than the specified recording time printed on the label. This unit can program tracks to use the extra time. When the total recording time is a little longer than the tape's specified recording time after editing, the display shows the extra time (without a minus mark), instead of the time remaining on the tape (with the minus mark).

NOTE

- Recording is inhibited if the erasure prevention tab on either side of the tape is broken off.
- The AI edit function cannot be used with discs containing 31 tracks or more.

PROGRAMMED EDIT RECORDING

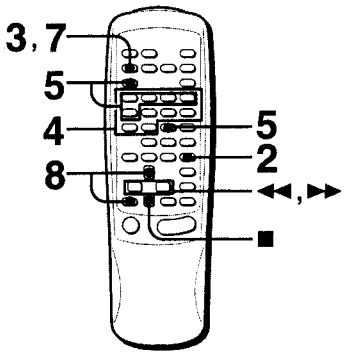

Programmed edit function enables CD recording while checking the remaining time on each side of the tape as the tracks are programmed.

NOTE

The programmed edit recording will not start from a point halfway in the tape. The tape must be recorded from the beginning of either side.

Use the remote control from steps 3 to 8.

1 **Insert the tape into Deck 2, and press the DOLBY NR button to turn Dolby NR on or off.**
Insert the tape with the side to be recorded on first facing out from the unit.

2 **Press the CD button and load the disc(s).**

3 **Press the EDIT/CHECK button twice.**
"EDIT" lights up and "PRGM" flashes on the display.

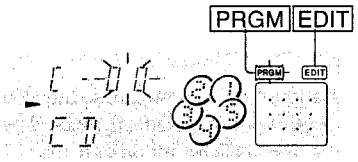

4 **Press the numeric buttons to designate the tape length.**
10 to 99 minutes can be specified.
Example: When using a 60-minute tape, press the 6 and 0 buttons.

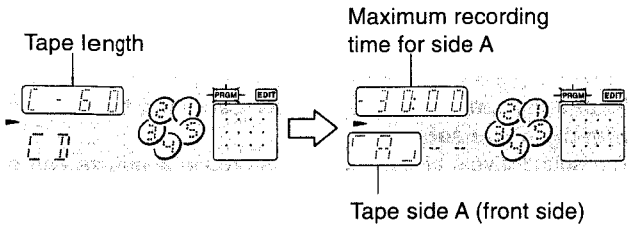

5 **Press the DIRECT button, then press one of the numeric buttons 1 to 5 within 3 seconds to select a disc, and press the numeric buttons to program a track.**
Example: To select the 10th track of disc 2, press the DIRECT button and the numeric button 2, then the numeric buttons +10 and 0.

6 **Repeat step 5 for the rest of the tracks for side A.**
A track which has a playing time longer than the remaining time cannot be programmed.

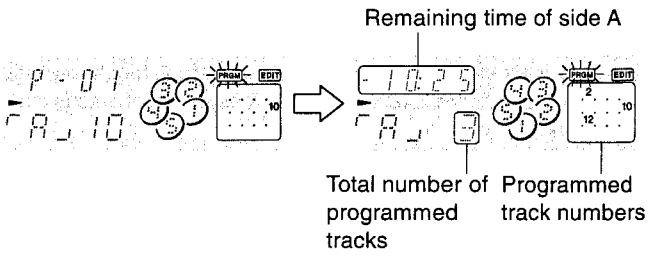

7 **Press the EDIT/CHECK button to select side B and program the tracks for side B.**
After confirming B on the display, repeat step 5.

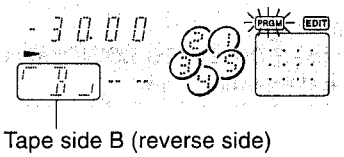

8 **Press the ●REC/REC MUTE button and then press the ◀▶ button within 2 seconds to start recording.**
The tape is rewound to the beginning of the front side, the lead segment is played through for 10 seconds, and recording starts. When recording on the front side A ends, recording on the back side B starts.

To stop recording
Press the ■ button. Recording and CD play stop simultaneously.

To check the order of the programmed track numbers
Before recording, press the EDIT/CHECK button to select side A or B, and press the ◀◀ or ▶▶ button repeatedly.

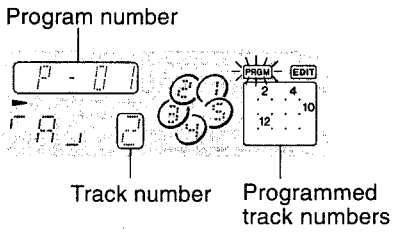

To change the program of each side
Press the EDIT/CHECK button to select side A or B, and press the ■CLEAR button to clear the program of the selected side. Then program tracks again.

To clear the edit program
Press the ■CLEAR twice so that "EDIT" disappears on the display.

NOTE

Recording is inhibited if the erasure prevention tab on either side of the tape is broken off.

The Dolby Pro Logic feature and the center and rear speakers (standard) assure full-scale home theater sound. When playing back laser discs or video software that have been specially recorded with four-channel sound (left, right, center, rear) and steering logic (for sound directionality), astonishingly realistic sound surrounds the listener to create a new level of audio/visual entertainment.
Independent control of the four sound channels allows the listener to enjoy the same type of sound reproduction experienced in movie theaters. Voices are reproduced in the front and center sound field, while ambient sounds like cars and crowds are reproduced on all sides of the listener for an incredibly lifelike audio/video experience. Please read the following carefully to "tune" the system's output to match the characteristics of your listening space.

Check the following:

- **Before using the DOLBY PRO LOGIC, adjust the proper balance of speaker sound levels.**
- Make sure the supplied speakers are properly connected and positioned. (See page 3)
- Make sure the TV set and video unit are properly connected. (See page 4)
- Make sure the laser disc, video tape, etc., support DOLBY SURROUND.

ADJUSTING SPEAKER LEVEL BALANCE

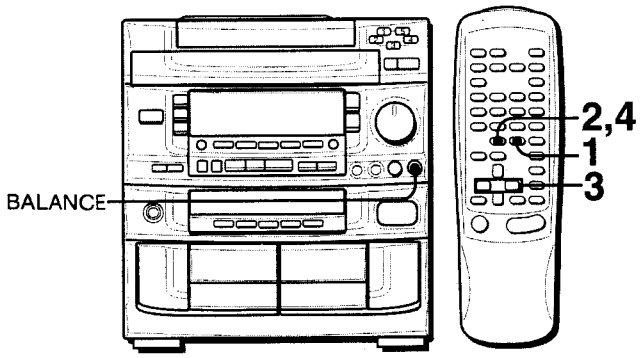

The unit is equipped with a built-in test signal generator called a noise sequencer for easy balance adjustment of all four channels. The sequencer outputs a noise signal that "travels" from channel to channel, enabling the simple adjustment of sound level to achieve, at the listening position, the same apparent loudness from each channel.

Use the remote control.

***1* Press the DOLBY PRO LOGIC button to select NORMAL.**
If PHANTOM or 3CH LOGIC appears, press the DOLBY PRO LOGIC button repeatedly until NORMAL is selected.

***2* Press the MANUAL SELECT (TEST) button and hold it down for about four seconds until "L-CH" lights.**



A noise signal is sent to each channel in turn in the following sequence.



***3* Adjust the sound level of the center and the surround speakers.**
While "C" or "S" is displayed, press the DOWN ⏮ or UP ⏭ button to adjust the volume of the center or surround speakers to match the level of the left and right speakers.



To adjust the balance between the left and right speakers, use the BALANCE control while "L" or "R" is displayed.

***4* Press the MANUAL SELECT (TEST) button again to stop the noise signal.**

NOTE

If the surround speakers volume of the DSP SURROUND is changed (See page 7), the DOLBY PRO LOGIC level is also changed.

About the channels

The left and right speakers create the stereo effect.
The center speaker helps achieve precise sound positioning over a broad sound field.
The rear-mounted surround speakers enhance the "depth" of the sound field.

To change the delay time

The surround speakers reproduce sounds a split second after the front speakers. The delay is initially set to 20 ms (milliseconds).
To change this standard delay time, press the MANUAL SELECT (TEST) button on the remote control three times in NORMAL mode (or twice in PHANTOM mode) so that "T" is displayed. Then, press the DOWN ⏮ or UP ⏭ button. Each time one of the buttons is pressed, the delay time changes as shown below.

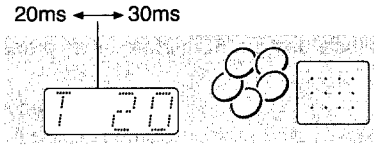

To change the sound levels after adjusting the balance with the noise sequencer

The sound levels of the center or surround speakers can be adjusted during playback of laser discs or video software.

1 Press the MANUAL SELECT (TEST) button on the remote control once or twice to select "C" (center) or "S" (surround).
2 While the "C" or "S" is displayed, press the DOWN ⏮ or UP ⏭ button on the remote control to adjust the volume.

PLAY WITH DOLBY PRO LOGIC

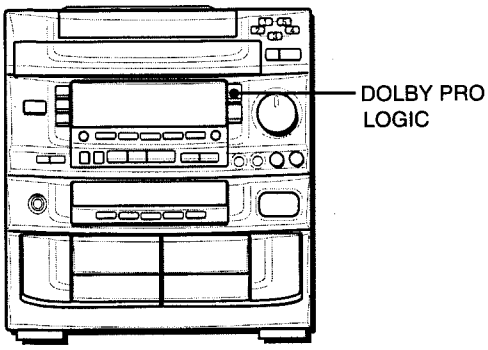

1 Start playback of the video source.

2 Press the DOLBY PRO LOGIC button.
NORMAL is selected, and the playback sound has the DOLBY PRO LOGIC effect.

To cancel DOLBY PRO LOGIC mode
Press the DOLBY PRO LOGIC button repeatedly until P-oFF is displayed.

ADDITIONAL DOLBY PRO LOGIC MODES

In addition to the NORMAL mode, this unit is also equipped with the PHANTOM and the 3 CH LOGIC modes.
PHANTOM mode: Use this mode when no center speaker is connected. The center channel signals are output through the left and right speakers.
3 CH LOGIC mode: Use this mode when no surround speakers are connected. This mode reproduces rear sounds through the front speakers.

To select PHANTOM or 3 CH LOGIC
Press the DOLBY PRO LOGIC button to run through the mode choices for selection in the following sequence.

NORMAL → PHANTOM → 3 CH LOGIC
cancel

To adjust the balance of connected speaker sound levels
Carry out steps 2 to 4 on page 17.

NOTE

- Depending on the sound source and/or listening conditions, a surround effect may not be obtained even when the DOLBY PRO LOGIC is on.
- The full DOLBY PRO LOGIC effect cannot be obtained when using software without DOLBY SURROUND mark. In this case, use the DSP SURROUND system instead. (See page 7.)

MICROPHONE MIXING

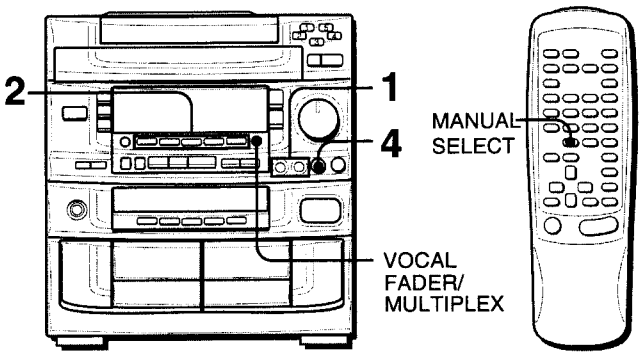

Two microphones (not supplied) can be connected to this unit, allowing you to sing along to music sources.
Use microphones with standard plugs (ø6.3 mm).

Before connecting a microphone
Set the MIC MIXING control to MIN.

1 Connect your microphones to the MIC 1 and MIC 2 jacks.

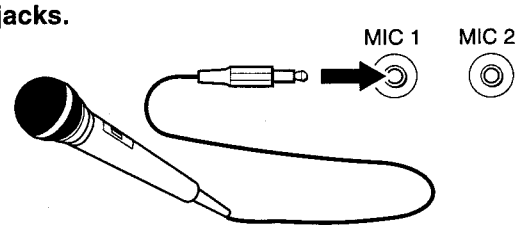

2 Press one of the function buttons to select the source to be mixed, and play the source.

3 Adjust the volume and tone of the source.

4 Adjust the microphone volume with the MIC MIXING control.
The volume of both microphones is adjusted simultaneously.

To echo the microphone sound
Press the MANUAL SELECT button on the remote control once and then press the ◀◀ or ▶▶ button. The display changes as follows.

MAX (maximum) ↔ −3 ↔ −6 .... −15 ↔ MIN (minimum)

- Make sure the SURROUND and the DOLBY PRO LOGIC are turned off before pressing the MANUAL SELECT button.

To record microphone sound mixed with source sound
Follow the procedure for recording from the sound source (see page 13).
The SYNC DUB button cannot be used for mixing recording.

When not using the microphones
Set the MIC MIXING controls to MIN and remove the microphones from the MIC jacks.

NOTE

- When a connected microphone is used, the SURROUND system and the DOLBY PRO LOGIC are automatically canceled.
- If a microphone is held too close to the speakers, a howling sound may be produced. In this case, hold the microphone away from the speakers, or decrease the sound level using the MIC MIXING control.
- If sound through the microphone is extremely loud, sound may be distorted. In this case, turn the MIC MIXING control toward MIN.

Recommended microphones

Use of unidirectional type microphones is recommended to prevent howling. Contact your local Aiwa dealer for details.

VOCAL FADER/MULTIPLEX FUNCTIONS

This unit can use discs or tapes as Karaoke sources.

Press the VOCAL FADER/MULTIPLEX button repeatedly to select the vocal fader or multiplex function.

Use the vocal fader function for ordinary discs or tapes.
Use the multiplex function for multi audio discs or tapes.
Each time the VOCAL FADER/MULTIPLEX button is pressed, one of the following functions is selected cyclically.

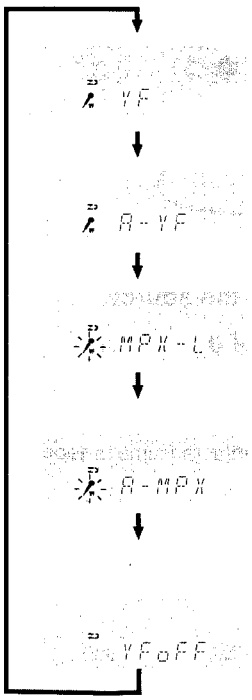

Vocal Fader (VF)
The singer's voice becomes softer than the accompaniment.

Auto Vocal Fader (A-VF)
The singer's voice becomes softer only while there is audio input through a microphone.

Multiplex (MPX-L)
The sound on the left (or right) channel is heard from both speakers, and the sound on the right (or left) channel is muted.

Auto Multiplex (A-MPX)
The sound on the left (or right) channel is heard from both speakers, and the sound on the right (or left) channel is muted only while there is audio input through a microphone.

Cancel

To change the time lag setting of the Auto Vocal Fader or Auto Multiplex function

When Auto Vocal Fader or Auto Multiplex is selected, "A-VF" or "A-MPX" is displayed for 3 seconds and changes to the selected function name. After the selected function name is displayed, hold the VOCAL FADER/MULTIPLEX button down until the desired time lag setting, SLOW or FAST, is selected.

SLOW
Fade-out of original singer's voice returns to the normal level if there is no audio input from the microphone within 2 seconds.

FAST
Fade-out of original singer's voice returns to the normal level if there is no audio input from the microphone within 0.5 seconds.

When the power is turned off or one of the function buttons is pressed, the Auto Vocal Fader and Auto Multiplex restore to SLOW.

To change the muted channel of the Multiplex function

When Multiplex is selected, "MPX-L" is displayed for 3 seconds and changes to the selected function name. After the selected function name is displayed, hold the VOCAL FADER/MULTIPLEX button down until the channel to be output from both speakers, MPX-L or MPX-R, is selected.

MPX-L
The sound on the left channel is heard from both speakers and the sound on the right channel is muted.

MPX-R
The sound on the right channel is heard from both speakers and the sound on the left channel is muted.

When the power is turned off or one of the function buttons is pressed, the Multiplex restores to MPX-L.

When using the remote control

Press the KARAOKE button instead of the VOCAL FADER/ MULTIPLEX button.

NOTE

- The VOCAL FADER functions may not operate correctly with the following CDs or tapes.
  - Those with monaural sound
  - Those recorded with strong echoes
  - Those with the vocal part recorded on the right or left side of the sound width
- While the VOCAL FADER function is on, the sound is output as monaural.
- While the VOCAL FADER function is on, the DOLBY PRO LOGIC is automatically canceled.

KARAOKE PROGRAM

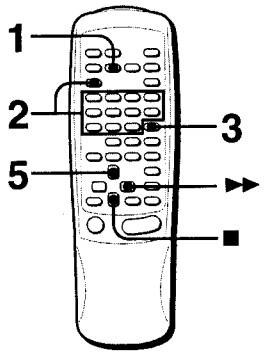

Before or during CD play, you can reserve up to 15 tracks to be played after the current track. Each reservation is cleared when it finishes playing.

Use the remote control.

***1* Press the PRGM button once.**



***2* Press the DIRECT button then press one of the numeric buttons 1 to 5 within 3 seconds to select a disc, and press the numeric buttons to select a track.**

***3* Press the KARAOKE ENTER button.**

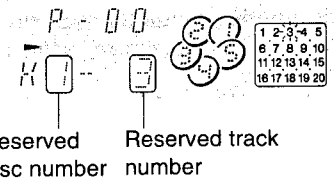

***4* Repeat steps 2 and 3 to reserve other tracks.**

***5* Press the ◄► button to start play.**

After a track is played, it is cleared from the program. Another track can be reserved in place of the cleared track.

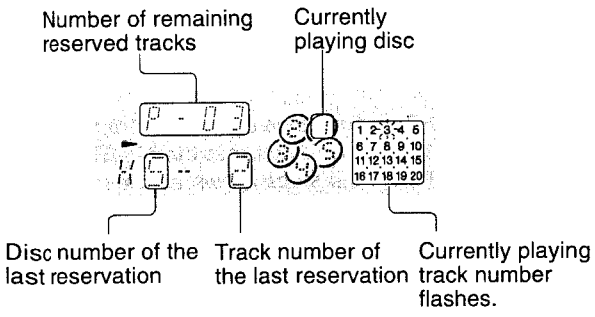
Number of remaining reserved tracks
Currently playing disc
P-03
K 5 -- 3
1 2 3 4 5
6 7 8 9 10
11 12 13 14 15
16 17 18 19 20
Disc number of the last reservation
Track number of the last reservation
Currently playing track number flashes.

To add a reservation during play

Repeat steps 2 and 3.

To check the reserved tracks

Press the EDIT/CHECK button repeatedly. Each time it is pressed, the disc number and track number are displayed in the reserved order.

To stop play

Press the ■ button. Press the ◄► button to start again.

To skip a track

Press the ►► button. The skipped track is cleared from the program.

To clear all the reservations

Press the ►► button repeatedly until "K --" is displayed.

Press it once more to cancel the Karaoke programs. The display returns to that of CD play.

NOTE

- If the reserved track number does not exist on the selected disc, the unit stops playing and the display flashes.
  In this case, press the ►► button to skip the error track. Then press the ◄► button to start play with the next reserved track.
- When the PRGM button is pressed repeatedly in step 1, PRGM is displayed and the unit enters CD programmed play mode (page 12).
  To cancel programmed play, press the ■ button.

SETTING THE TIMER

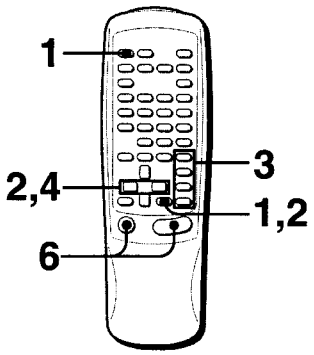

The unit can be turned on at a specified time every day with the built-in timer.

Preparation
Make sure the clock is set correctly. (See page 6.)

Use the remote control.

1 **Press the TIMER button once to display ⏲, and press the ❚❚SET button within 4 seconds.**
⏲ is displayed, and the hour flashes.

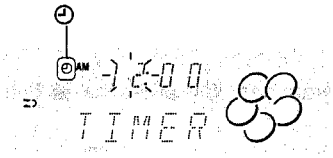

NOTE
If you do not press the ❚❚SET button within 4 seconds, another operation may start.

2 **Designate the hour of the timer-on time by pressing the ⏮ DOWN or ⏭ UP button, and the ❚❚SET button. Repeat to designate the minute of the timer-on time.**



After you designate the timer-on time, TIMER and one of the source name flashes alternately on the display for 4 seconds.

3 **Within 4 seconds, press one of the function buttons to select a source.**
"TIMER" and the selected source name flash alternately for 4 seconds. At this time, the selected function button does not light up in red.
- If this step is not completed within 4 seconds, repeat from step 1.
- If the TUNER button is pressed, the band cannot be selected in this step.

4 **Within 4 seconds, select the duration for the timer-activated period with the ⏮ DOWN or ⏭ UP button.**

The duration for the timer-activated period can be set between 10 and 240 minutes in 10-minute steps.
- If this step is not completed within 4 seconds, repeat from step 1.

5 **Prepare the source.**
To listen to a CD, load the disc to be played first on tray 1.
To listen to a tape, insert the tape into Deck 1 or 2.
To listen to the radio, tune in to a station.

6 **Press the POWER button to turn the unit off after adjusting the volume and tone.**
⏲ remains on the display after the power is turned off (timer standby mode).

When the timer-on time is reached, the unit turns on and begins play with the selected source.

To check the specified time and source
Press the TIMER button on the remote control. The timer-on time and the selected source name are displayed for 4 seconds. However, the duration for the timer-activated period will not be displayed.

To cancel timer standby mode temporarily
Press the TIMER button on the remote control so that ⏲ or ⏲REC disappears on the display.
To restore the timer standby mode, press again to display ⏲ or ⏲REC.

Using the unit while it is in timer standby mode
You can use the unit normally after setting the timer.
Before turning off the power, repeat step 5 to prepare the source, and adjust the volume and tone.

TIMER RECORDING

Timer recording is applicable for TUNER and VIDEO/AUX (with an external timer) sources only.

Press the TIMER button twice on the remote control so that ⏲REC appears on the display, and press the ❚❚SET button within 4 seconds. Repeat the steps shown above from step 2 and insert the tape to be recorded into Deck 2 after step 5.

NOTE
- Timer playback and timer recording will not begin unless the power is turned off.
- Connected equipment cannot be turned on and off by the built-in timer of this unit. Use an external timer.

SETTING THE SLEEP TIMER

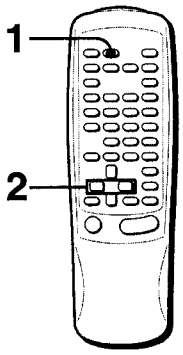

The unit can be turned off automatically at a specified time.

Use the remote control.

***1* Press the SLEEP button.**



***2* <u>Within 4 seconds,</u> press the ◀◀ or ▶▶ button to specify the amount of time until the power turns off.**

Each time the button is pressed, the time changes between 10 and 240 minutes in 10-minute steps.

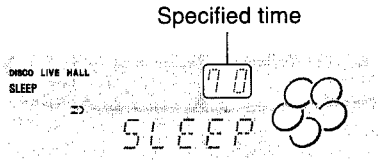

To check the time remaining until the power turns off

Press the SLEEP button once. The remaining time is displayed for 4 seconds.

To cancel the sleep timer

Press the SLEEP button twice so that "SLEEP" on the display disappears.

CONNECTING OPTIONAL EQUIPMENT

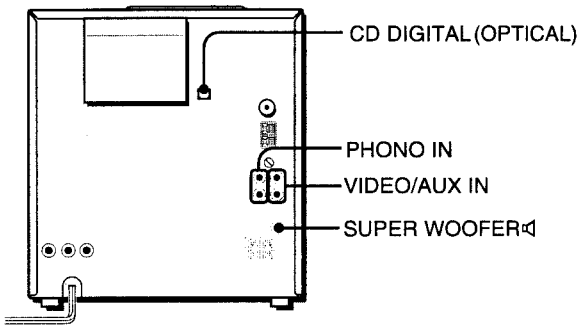

Refer to the operating instructions of the connected equipment for details.

- The connecting cords are not supplied. Obtain the necessary connecting cords.
- Consult your local Aiwa dealer for optional equipment.

VIDEO/AUX IN JACKS

This unit can input analog sound signals through these jacks. Use a cable with RCA phono plugs to connect audio equipment (LD player, VCR, TV, etc.)

Connect the red plug to the R jack, and the white plug to the L jack.

PHONO IN JACKS

Connect a turntable. Use an Aiwa turntable equipped with a built-in equalizer amplifier.

CD DIGITAL OUT (OPTICAL) JACK

This unit can output CD digital sound signals through this jack. Use an optical cable to connect digital audio equipment (digital amplifier, DAT deck, MD recorder, etc.)

Remove the dust cap ⓐ from the CD DIGITAL OUT (OPTICAL) jack, then connect an optical cable plug to the CD DIGITAL OUT (OPTICAL) jack.

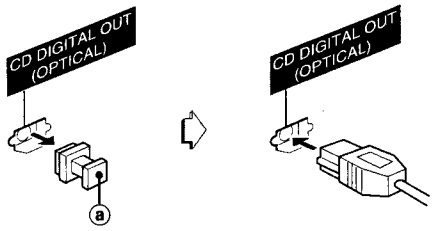

When the CD DIGITAL OUT (OPTICAL) jack is not being used

Attach the supplied dust cap.

SUPER WOOFER JACK

Connect an optional powered sub woofer with a built-in amplifier to the jack.

LISTENING TO EXTERNAL SOURCES

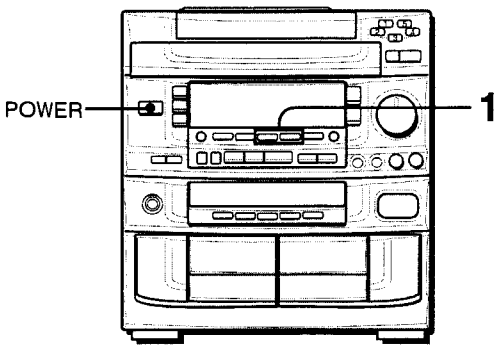

To play equipment connected to the PHONO IN or VIDEO/AUX IN jacks, proceed as follows.

***1* Press the PHONO or VIDEO/AUX button.**
PHONO or VIDEO appears on the display.

***2* Play the connected equipment.**

To change a source name on the display
When the VIDEO/AUX button is pressed, VIDEO is displayed initially. It can be changed to AUX or TV.
With the power on, press the POWER button while pressing the VIDEO/AUX button.
Repeat the procedure until the desired name appears on the display.

To adjust the sound level of the external source
When the sound level of the external source is much higher or much lower than that of other function sources, adjust it as follows.

1 Press the VIDEO/AUX button and play the equipment.
2 Turn the VIDEO/AUX INPUT LEVEL control on the rear panel until the sound level becomes the same as that of other function sources.

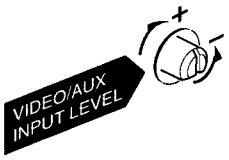

CARE AND MAINTENANCE

Occasional care and maintenance is needed to optimize the performance of your unit.

To clean the cabinet
Use a soft and dry cloth.
If the surfaces are extremely dirty, use a soft cloth lightly moistened with mild detergent solution. Do not use strong solvents, such as alcohol, benzine or thinner as these could damage the finish of the unit.

To clean the heads and tape paths
After every 10 hours of use, clean the heads and tape paths with a head cleaning cassette or cotton swab moistened with cleaning fluid or denatured alcohol. (These cleaning kits are commercially available.)
When cleaning with a cotton swab, wipe the recording/playback head, erasure head (deck 2 only), capstans, and pinchrollers.

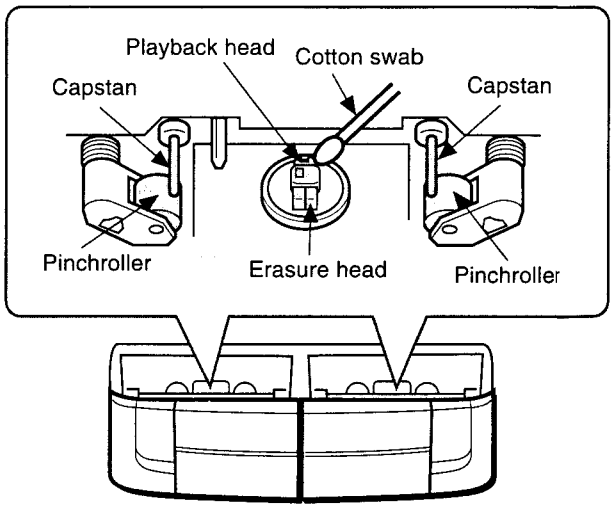

After cleaning the heads and tape paths with a liquid head cleaning cassette or a moistened swab, wait until the cleaned parts are completely dry before inserting the tapes.

To demagnetize the heads
The heads may become magnetized after long-term use. This may narrow the output range of recorded tapes and increase noise. After 20- to 30-hour use, demagnetize the heads with any commercially available demagnetizer.

Care of discs
- When a disc becomes dirty, wipe the disc from the center out with a cleaning cloth.

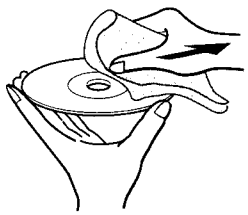

- After playing a disc, store the disc in its case. Do not leave the disc in places that are hot or humid.

Care of tapes
- Store tapes in their cases after use.
- Do not leave tapes near magnets, motors, television sets, or any source of magnetism. This will downgrade the sound quality and cause noise.
- Do not expose tapes to direct sunlight, or leave them in a car parked in direct sunlight.

SPECIFICATIONS

Main unit CX-ZVM270

FM tuner section

Tuning range	87.5 MHz to 108 MHz
Usable sensitivity (IHF)	13.2 dBf
Antenna terminals	75 ohms (unbalanced)

MW tuner section

Tuning range	531 kHz to 1602 kHz (9 kHz step) 530 kHz to 1710 kHz (10 kHz step)
Usable sensitivity	350 µV/m
Antenna	Loop antenna

LW tuner section

Tuning range	144 kHz to 290 kHz
Usable sensitivity	1400 µV/m
Antenna	Loop antenna

Amplifier section

Power output	**Front** Rated: 65 W + 65 W (6 ohms, T.H.D. 1 %, 1 kHz) Reference: 80 W + 80 W (6 ohms, T.H.D. 10 %, 1 kHz) **Rear (Surround)** Rated: 10 W + 10 W (16 ohms, T.H.D. 1 %, 1 kHz) Reference: 12 W + 12 W (16 ohms, T.H.D. 10 %, 1 kHz) **Center** Rated: 20 W (8 ohms, T.H.D. 1 %, 1 kHz) Reference: 24 W (8 ohms, T.H.D. 10 %, 1 kHz)
Total harmonic distortion	0.1 % (33 W, 1 kHz, 6 ohms, DIN AUDIO)
Inputs	VIDEO/AUX: 240 mV (adjustable) PHONO: 400 mV (47 kohms) MIC 1, MIC 2: 1.6 mV (20 kohms)
Outputs	SUPER WOOFER: 2.0 V SPEAKERS: accept speakers of 6 ohms or more SURROUND SPEAKERS: accept speakers of 16 ohms or more CENTER SPEAKER: accepts speakers of 8 ohms or more PHONES (stereo jack): accepts headphones of 32 ohms or more

Cassette deck section

Track format	4 tracks, 2 channels stereo
Frequency response	CrO_2 tape: 50 Hz – 16000 Hz Normal tape: 50 Hz – 15000 Hz
Signal-to-noise ratio	60 dB (Dolby B NR ON, CrO_2 tape peak level, above 400 Hz)
Recording system	AC bias
Heads	Deck 1: Playback head × 1 Deck 2: Recording/playback/erase head × 1

Compact disc player section

Laser	Semiconductor laser (λ = 780 nm)
D-A converter	1 bit dual
Signal-to-noise ratio	85 dB (1 kHz, 0 dB)
Harmonic distortion	0.03 % (1 kHz, 0 dB)
Wow and flutter	Unmeasurable

General

Power requirements	230V AC, 50 Hz
Power consumption	390 W
Dimensions of main unit (W × H × D)	360 × 394.5 × 375.5 mm
Weight of main unit	11 kg

Speaker system SX-Z270

Cabinet type	3 way, bass reflex
Speakers	Woofer: 220 mm cone type Tweeter: 60 mm cone type Super tweeters: 20 mm ceramic type
Impedance	6 ohms
Output sound pressure level	90 dB/W/m
Dimensions (W × H × D)	260 × 444 × 270 mm
Weight	4.6 kg

Specifications and external appearance are subject to change without notice.

DOLBY NR/DOLBY PRO LOGIC

Manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY", the double-D symbol ⧈ and "PRO LOGIC" are trademarks of Dolby Laboratories Licensing Corporation.

COPYRIGHT

Please check the laws on copyright relating to recordings from discs, radio or external tape for the country in which the machine is being used.

OBSERVERA

Så länge som apparaten är ansluten till nätet flyter en svag ström genom densamma, även då den är avstängd. Om man under en längre tid ej har för avsikt att använda den, drag då ur nätkabeln.

BEMÆRK

Apparate er stadig forbundet med lysnettet, så længe stikket er tilsluttet til stikkontakten, selv om afbryteren er slået fra. Hvis apparatet ikke bruges i længere tid, skal netledningen trækkes ud.

TROUBLESHOOTING GUIDE

If the unit fails to perform as described in these Operating Instructions, check the following guide.

GENERAL

There is no sound.
- Is the AC cord connected properly?
- Is there a bad connection? (→ page 4)
- There may be a short circuit in the speaker terminals.
  → Disconnect the AC cord, then correct the speaker connections.
- Was an incorrect function button pressed?

Sound is emitted from one speaker only.
- Is the other speaker disconnected?

The output sound is not stereo.
- Is the Karaoke function turned on? (→ page 19)

An erroneous display or a malfunction occurs.
→ Reset the unit as stated below.

TUNER SECTION

There is constant, wave-like static.
- Is the antenna connected properly? (→ page 3)
- Is the signal weak?
  → Connect an outdoor antenna.

The reception contains noise interferences or the sound is distorted.
- Is the system picking up external noise or multipath distortion?
  → Change the orientation of the antenna.
  → Move the unit away from other electrical appliances.

CASSETTE DECK SECTION

The tape does not run.
- Is Deck 2 in pause mode? (→ page 10)

The sound is off-balance or not adequately high.
- Is the playback head dirty? (→ page 23)

Recording is not possible.
- Is the erasure prevention tab on the tape broken off? (→ page 9)
- Is the recording head dirty? (→ page 23)

Erasure is not possible.
- Is the erasure head dirty? (→ page 23)
- Is a metal tape being used?

High frequency sound is not emitted.
- Is a tape recorded without Dolby NR played back with the Dolby NR system operating? (→ page 10)
- Is the recording/playback head dirty? (→ page 23)

CD PLAYER SECTION

The CD player does not play.
- Is the disc correctly inserted? (→ page 11)
- Is the disc dirty? (→ page 23)
- Is the lens affected by condensation?
  → Wait approximately one hour and try again.

To reset

If an unusual condition occurs in the display window or the cassette decks, reset the unit as follows.

1 Press the POWER button to turn off the power.
2 Press the POWER button to turn the power back on while pressing the ■CLEAR button. Everything stored in memory after purchase is canceled.

If the power cannot be turned off in step 1 because of a malfunction, reset by disconnecting the AC cord and repeat step 2.

PARTS INDEX

Instructions about each part on the main unit or remote control are indicated on the pages listed below.

(in alphabetic order)

Parts	Pages
BALANCE	6, 17
CD	11
■CLEAR	5, 6, 9, 10, 12
CLOCK	6
DEMO	5
DIRECT	11
◀▶ DIRECTION/PRESET	9, 10, 11
DISC CHANGE	11
DISC DIRECT PLAY	11
DOLBY NR	9, 10, 13
DOLBY PRO LOGIC	17, 18
◀◀, ⏮ DOWN	6, 8, 10, 11
EDIT/CHECK	11, 15, 16
GEQ (GRAPHIC EQUALIZER)	7
KARAOKE (VOCAL FADER/MULTIPLEX)	19
KARAOKE ENTER	20
MANUAL SELECT	7, 17, 18
MIC 1, MIC 2	18
MIC MIXING	18
⏏OPEN/CLOSE	11
PHONES	6
PHONO	23
POWER	5
PRGM	12, 20
RANDOM	12
●REC/REC MUTE	13, 14
REPEAT/MONO TUNER	8, 12
REV MODE (DECK 2)	9, 13
❚❚SET	5, 8, 9
SLEEP	22
SURROUND	7
SYNC DUB	14
TAPE/DECK 1/2	9, 14
T-BASS	6
TIMER	21
TUNER/BAND	8
⏭, ▶▶ UP	6, 8, 10, 11
VIDEO/AUX	23
VOCAL FADER/MULTIPLEX (KARAOKE)	19
VOLUME	6
0-9, +10	8, 11